



JL-9511

OPERATION DESCRIPTION



< B-B >

< B-C >

< A-C >

Operation description:

1. First, please check the spring angle of shock absorber that you would like to disassemble and then to choose A, B, C Clamp.
2. Assemble clamp on #19 and #21 fastener holder (For example B fit B or A fit C)
3. Then turn #6 turning wheel of #19, fastener holder, adjust to the proper position and then put adjust clamp on shock absorber to completely press spring will do.
4. To lock tightly #63 Hydraulic valve and to shake up and down for #48 Hydraulic operated rod. Then hydraulic spring will move #21 clamp to fasten seat up to your proper height position, Then you can disassemble the auto shock absorber.
5. After dismantling and changing the shock absorber, To slowly release #63 Hydraulic valve, then #21 fastener holder will lower to original position.